


Clamping Ring Instruction Sheet

~Top view of tank and clamping rings (valve omitted for the sake of visual clarity)~

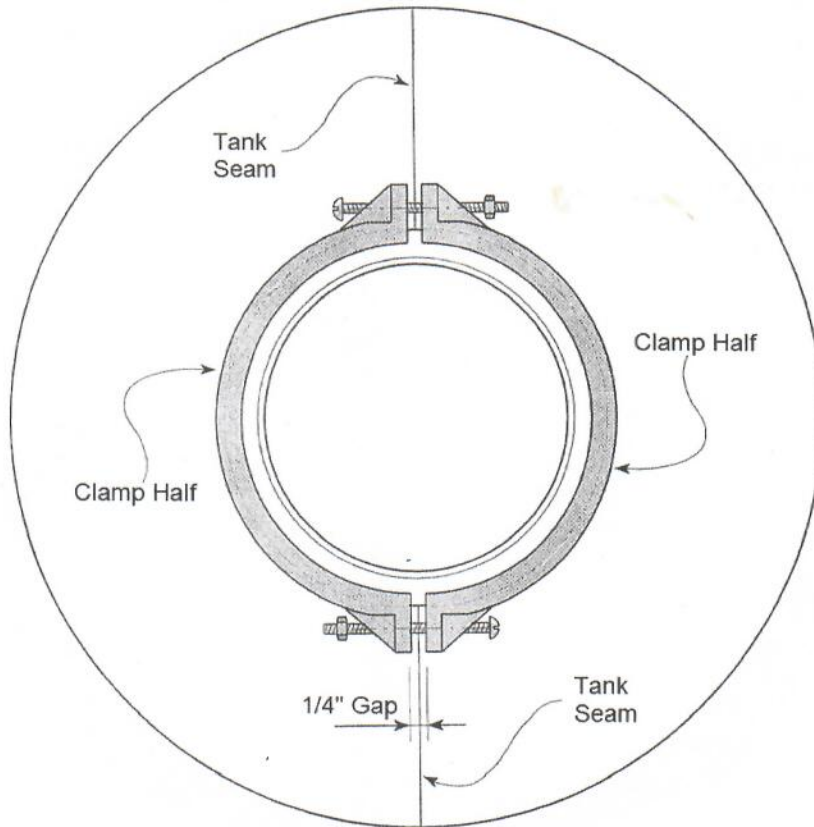

CAUTION: Over tightening of screws can cause and worsen leaks. Over tightening will ultimately break the clamp. DO NOT USE POWER SCREWDRIVERS TO TIGHTEN CLAMP SCREWS.

-When properly tightened, the gap between the clamp halves should be 1/4" to 3/8".

-Make sure to tighten clamps evenly. The gaps on both sides should match.

-Make sure to line up clamps so the gaps are aligned over the tank seam.

Note: If you encounter leaking around the clamps, please request a Special Lid O-ring from your dealer or from the factory.