Clearing the Diaphragm


Use the Quick Access Cassette system to quickly clear the diaphragm or check it for damage.

To remove:


- Unscrew the cassette and pull it out of the cleaner.
- Loosen the cassette chamber; pull the inner pipe and diaphragm from the bottom of the cassette chamber.
- Pull off the diaphragm.
 Inspect it for debris or wear, and rinse it thoroughly with water. Replace if necessary.

To install:

- 1. Verify that the retaining ring is on the diaphragm.
- 2. Push diaphragm onto inner pipe.
- 3. Pull inner pipe and diaphragm through bottom of cassette chamber until the diaphragm seats against the lip.
- 4. Tighten cassette outer pipe and replace cassette body.

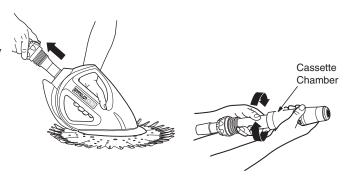

Inner Pipe

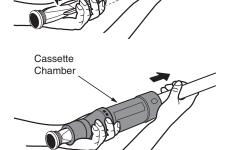

Retaining


Diaphragm

Replacing the Foot Pad

The foot pad should be replaced when the depths of the channels between the treads are 1/8" or less


To remove:

Press down on the locking tab while pulling the foot flange toward you and up.

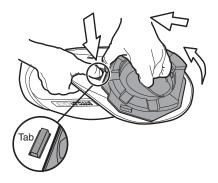

To install:

Insert foot flange into body, push down and lock into place.

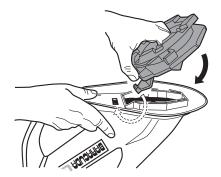

Storage and Winterizing

Never coil the hose. Always store G3 out of direct sunlight. When storing for the winter, drain all water from the cleaner. Remove all connectors and adapters from the dedicated suction line or skimmer. Store finned disc flat, and hose sections disconnected, drained and straight.