



On Ground Installation Procedures

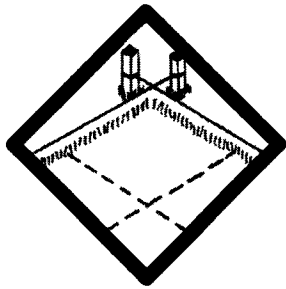


STEP 1

- determine the area of coverage which you desire
- when calculating the quantity of tiles required, remember each tile measures 16" x 16", this may influence your desired area of coverage as it is always best working with whole tiles
- using stakes at each corner connect string to outline the desired area

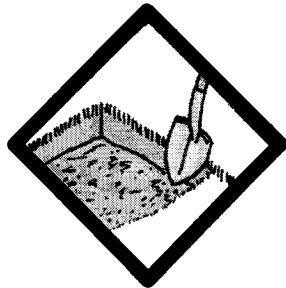


STEP 2

- remove ground cover and ground to a depth of 1 ½" - 2" for entire area

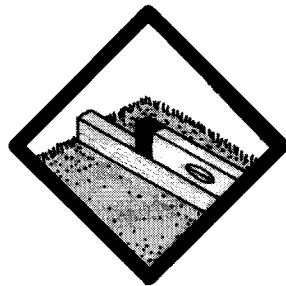


STEP 3

- spread sand at a depth of 1 ½" - 2" evenly over excavated area
- level sand with a straight edge (use a level if desired)
- do not step into sand

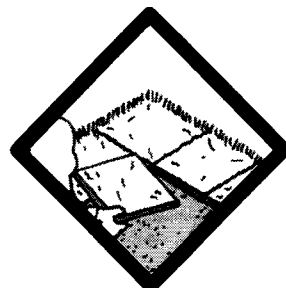

STEP 4

- start in a corner and position tiles in a triangular pattern
- depending on the style of tile selected, you may want to vary the pattern, this can be done by alternating the orientation of the tiles as they are laid
- remember to keep edges straight for better appearance

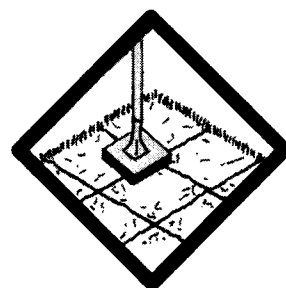

STEP 5

- tamp into place causing tiles to settle into sand base

